
beaphar

How do I fit a Gentle Leader?

Step by step guide to fitting a Gentle Leader


contours of your dog's face for a comfortable fit •Follow the instructions carefully taking the time to adjust the Gentle Leader to fit the

Throughout the fitting process & during initial use of a Gentle Leader, motivate &

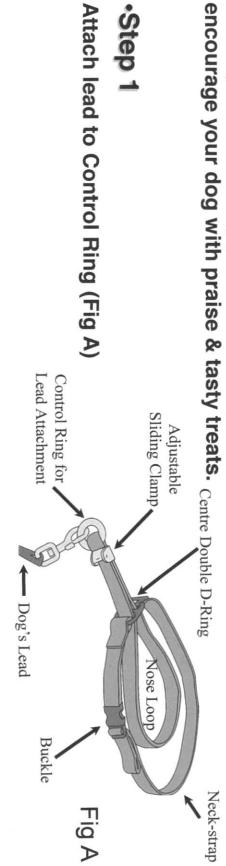

Step 2

Open neck strap, holding one end in each hand. Nose loop and lead should hang down to form the letter 'T' (Fig B)

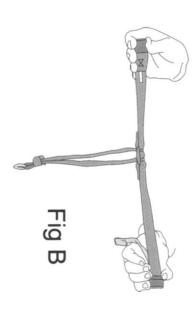

beaphar

How do I fit a Gentle Leader?

Step 3


at the front (Fig C) dog's skull at the back and snug above the Adam's Apple Fit neck-strap high on the neck, touching the base of your

dog's neck (Fig D) the neck-strap - this will prevent rotation around the It must be possible to squeeze just one finger underneath

than other collars you will notice that your dog is still distress or discomfort comfortable, able to pant easily & shows no signs of Even though the Gentle Leader fits much more snugly

Step 4

Take neck-strap off your dog

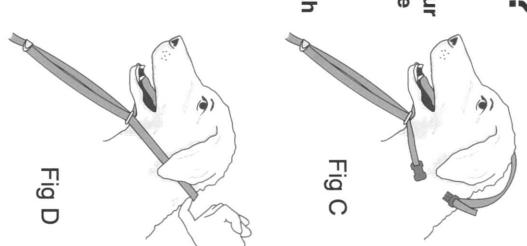

How do I fit a Gentle Leader?

Adjustable

Step 5

Sliding Clamp Control Ring Slide adjustable sliding clamp down to the control ring (Fig A) & pull nose loop up through centre double D-ring (Fig E)

Fig A

Fig E

Fig F

Step 6

strap high on the neck at its pre-fitted position (Fig G) Holding both straps in your hand slide the nose loop over your dog's nose (Fig F) & buckle the neck

Step 7

under the jaw (Fig H). The nose loop should be in front of Slide the adjustable sliding clamp up the nose loop your dog's eyes, behind the corners of your dog's fleshy part of the nose - but not so loose that you mouth & be loose enough to pull forward to the can pull it off the end of his nose

Fig G

adjustable sliding clamp, start walking straight away. Make final adjustment to nose loop & then close the

Fig H